



Iron-On TRANSFER PAPER for Dark Fabrics



Transform your T-shirts, jeans, bags, jackets, quilts, banners and home textiles! Print kid's drawings, photos, designs, famous paintings, clip art, digital art, text and scanned images!

Instructions:

1 Design

Select an image, pattern or photo on your computer, or create a design of your own. You can also draw (or paint) directly onto the non-glossy (unlined) side of the transfer paper with markers, pencils or inks. If your image has text or a specific direction, make sure to mirror (or flip) your image before printing.

2 Print

In the print dialog box, set your paper and quality settings according to the table below. Print your image on the non-glossy (unlined) side of the transfer paper. Let it dry for 15 minutes. Trim the edges of the image or cut out the elements of the design.

PRINTER:	HP	EPSON	CANON
MEDIA:	Iron-on Transfer	Plain Paper	Inkjet Paper
PRINT MODE:	Normal	Photo	Standard/High

3 Iron

Preheat the iron to the cotton/linen setting. Use lower temps for synthetic fabrics & blends. Pre-iron the fabric to remove wrinkles. Peel liner from backside of printed transfer sheet. On a smooth hard surface, place the transfer paper image-side up on the surface & cover completely with included parchment paper sheet, ensuring that the transfer is completely flat. Using firm, steady pressure, glide the iron in a circular motion over the entire transfer for the suggested time below. It is important to cover the transfer completely. Wait 2-3 minutes for transfer to cool then remove the parchment paper sheet using a smooth, even motion.

RECOMMENDED IRONING TIMES:

1/4 sheet: 1 minute • 1/2 sheet: 2 minutes • Full sheet: 3 minutes

Washing instructions: turn garments inside out before washing. Wash & dry separately from other clothes. Wash in cold water on a delicate setting or by hand. Remove fabric promptly from washer. Dry on low temperature.