



# PUFF ADDITIVE

## for Jacquard Professional Screen Inks




Jacquard Screen Ink  
and Puff Additive



1. Add Puff Additive to Jacquard Ink



2. Mix thoroughly

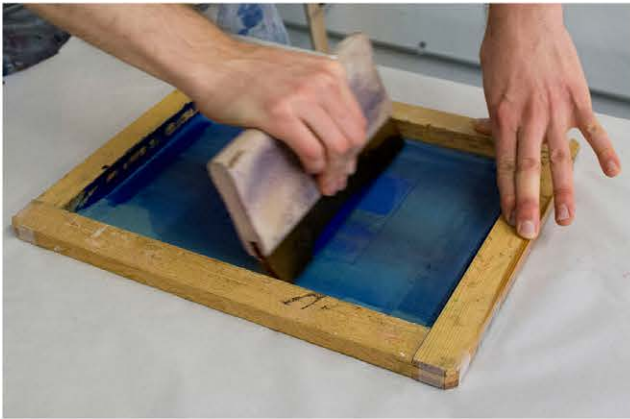

3. Print as usual



4. Allow time for partial drying



5. Heat print to 275°F  
with heat gun or oven



6. Check out your puffed print!!!